

Quick Start Guide

Motion MEMS and environmental sensor expansion board for

STM32 Nucleo

(X-NUCLEO-IKS01A2)





Quick Start Guide Contents

X-NUCLEO-IKS01A2: Motion MEMS and environmental sensor expansion board Hardware and Software overview

Setup & Demo Examples

Documents & Related Resources

STM32 Open Development Environment: Overview



Motion MEMS and environmental sensor expansion board

Hardware overview (1/3)

X-NUCLEO-IKS01A2 Hardware description

- The X-NUCLEO-IKS01A2 is a motion MEMS and environmental sensor evaluation board system.
- It is compatible with the Arduino UNO R3 connector layout, and is designed around ST's latest sensors.

Key products on board

LSM6DSL

MEMS 3D accelerometer $(\pm 2/\pm 4/\pm 8/\pm 16 \text{ g}) + 3D$ gyroscope $(\pm 125/\pm 245/\pm 500/\pm 1000/\pm 2000 \text{ dps})$

LSM303AGR

MEMS 3D magnetometer (±50 gauss) + MEMS 3D accelerometer (±2/±4/±8/±16 g)

LPS22HB


MEMS pressure sensor, 260-1260 hPa absolute digital output barometer

HTS221

Capacitive digital relative humidity and temperature

DIL 24-pin

Socket available for additional MEMS adapters and other sensors (UV index)

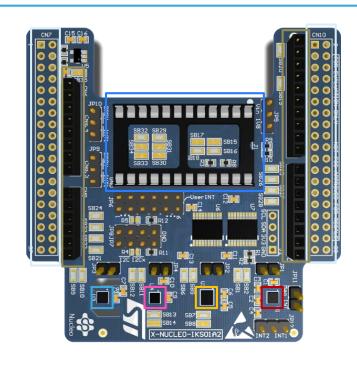

	HTS221	LSM6DSL	ST morpho connector**
--	--------	---------	-----------------------

LPS22HB LSM303AGR Arduino UNO R3 connector

DIL 24-pin

Latest info available at www.st.com X-NUCLEO-IKS01A2



LSM6DSL

LSM303AGR

LPS22HB

HTS221

DIL24

LSM303AGR

LPS22HB

HTS221

DIL₂₄

Sensor HUB

Motion MEMS and environmental sensor expansion board

1st connection mode

Hardware overview (2/3)

I²C

LSM6DSL

I²C

Main Board

Nucleo

Arduino UNO R3

Main Board

Nucleo


Arduino UNO R3

Key features

- The X-NUCLEO-IKS01A2 is a motion MEMS and environmental sensor evaluation board system.
- All sensors are connected on a single I²C bus or could be managed by a Sensor HUB
- Sensor I²C address selection

2nd connection mode DIL24 socket (compatible with STEVAL-MKI***V* MEMS adapter boards)





I²C

Representative of a DIL24 board


Motion MEMS and environmental sensor expansion board

Hardware overview (3/3) I

Key features

 Sensor disconnection (disconnects the I²C bus as well as the power supply allowing power consumption measurements)

 Interrupt and DRDY signals from sensors could be redirected.

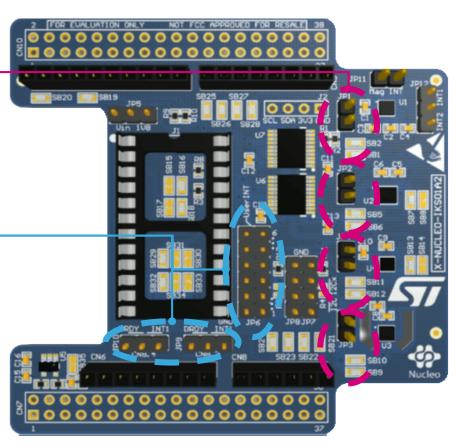



Motion MEMS and environmental sensor expansion board

Software overview 6


X-CUBE-MEMS1 Software description

- The X-CUBE-MEMS1 software package is an expansion for STM32Cube, associated with the X-NUCLEO-IKS01A2 expansion board.
- It is compatible with NUCLEO-F401RE, NUCLEO-L053R8, NUCLEO-L152RE or NUCLEO-L476RG

Key features

- Complete middleware to build applications using temperature and humidity sensors (HTS221), pressure sensor (LPS22HB) and motion sensors (LSM303AGR and LSM6DSL)
- Easy portability across different MCU families, thanks to STM32Cube
- Sample application to transmit real-time sensor data to a PC
- PC-based application (Windows®) to log sensor data
- Low-power optimization (suitable for the STM32L0 MCU family)



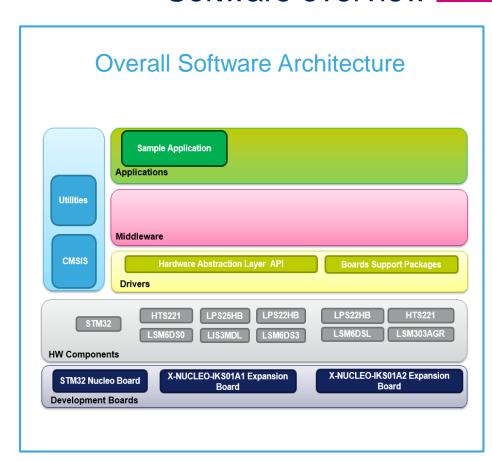

Latest info available at www.st.com X-CUBE-MEMS1

Quick Start Guide Contents

X-NUCLEO-IKS01A1: Motion MEMS and environmental sensor expansion board Hardware and Software overview

Setup & Demo Examples

Documents & Related Resources

STM32 Open Development Environment: Overview




Setup & demo examples

Hardware prerequisites

- 1x Motion MEMS and environmental sensor expansion board (X-NUCLEO-IKS01A2)
- 1x STM32 Nucleo development board (NUCLEO-F401RE or NUCLEO-L053R8 or NUCLEO-L152RE or NUCLEO-L476RG)
- Windows 8/7 Laptop/PC
- 1 x USB type A to mini-B USB cable



Mini USB Cable

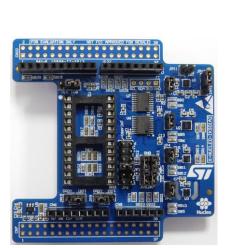

X-NUCLEO-IKS01A2



NUCLEO-F401RE NUCLEO-L053R8 NUCLEO-L152RE NUCLEO-L476RG



Setup & demo examples Software prerequisites _____9


- STSW-LINK008: ST-LINK/V2-1 USB driver
- STSW-LINK007: ST-LINK/V2-1 firmware upgrade
- X-CUBE-MEMS1
 - Copy the .zip file content into a folder on your PC
 - The package contains source code examples (Keil, IAR, System Workbench) based on NUCLEO-F401RE or NUCLEO-L053R8 or NUCLEO-L152RE or NUCLEO-L476RG





X-CUBE-MEMS1 in 7 steps

Use of Sensors_DataLog GUI with precompiled BIN FW

X-CUBE-MEMS1 for NUCLEO-F401RE or NUCLEO-L053R8 or NUCLEO-L152RE or NUCLEO-L476RG

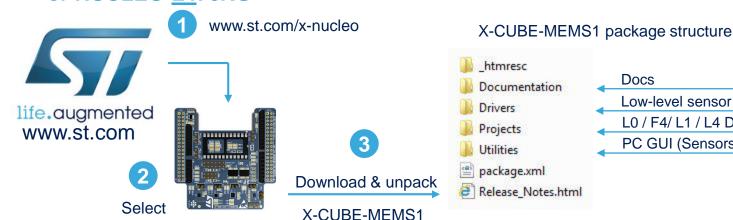

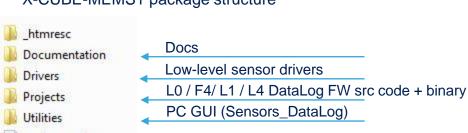





X-NUCLEO-IKS01A2









X-CUBE-MEMS1 in 7 steps


Use of Sensors_DataLog GUI with precompiled BIN fmw

X-CUBE-MEMS1 for NUCLEO-<u>F4</u>01RE or NUCLEO-<u>L0</u>53R8 or NUCLEO-<u>L1</u>52RE or NUCLEO-<u>L4</u>76RG

\STM32CubeExpansion_MEMS1_V3.0.0\Projects\Multi\Examples\IKS01A2\DataLog\Binary\STM32<u>F4</u>01RE-Nucleo \STM32CubeExpansion_MEMS1_V3.0.0\Projects\Multi\Examples\IKS01A2\DataLog\Binary\STM32<u>L0</u>53R8-Nucleo \STM32CubeExpansion_MEMS1_V3.0.0\Projects\Multi\Examples\IKS01A2\DataLog\Binary\STM32<u>L1</u>52RE-Nucleo \STM32CubeExpansion_MEMS1_V3.0.0\Projects\Multi\Examples\IKS01A2\DataLog\Binary\STM32<u>L4</u>76RG-Nucleo










DataLog.bin for F4 or for L0 or for L1 or for L4
on Nucleo drive



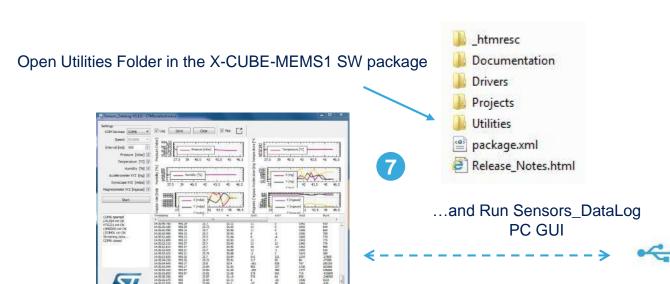






Utilities - Sensors_DataLog

X-CUBE-MEMS1 for NUCLEO-<u>F4</u>01RE, NUCLEO-<u>L0</u>53R8, NUCLEO-<u>L1</u>52RE or NUCLEO-<u>L4</u>76RG

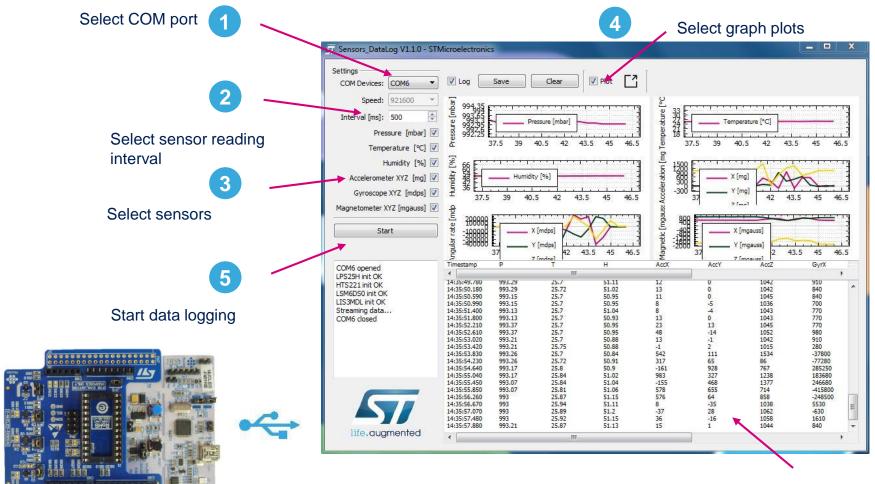



Data Log Area

Sensors_DataLog PC GUI

Compile the DataLog FW using a supported IDE


X-CUBE-MEMS1 for NUCLEO-<u>F4</u>01RE, NUCLEO-<u>L0</u>53R8, NUCLEO-<u>L1</u>52RE or NUCLEO-<u>L4</u>76RG

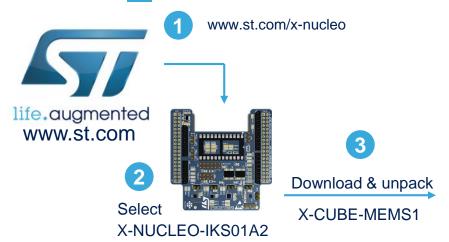

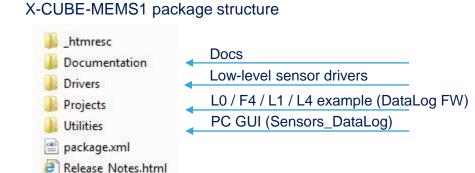



.\STM32CubeExpansion MEMS1 V3.0.0\Projects\Multi\Examples\IKS01A2\DataLog\EWARM\STM32F401RE-Nucleo

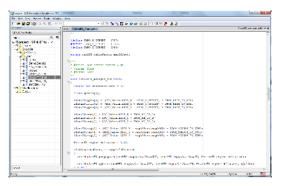







Flash and run the project.









X-CUBE-MEMS1


Using serial line monitor – e.g.TeraTerm


X-CUBE-MEMS1 for NUCLEO-<u>F4</u>01RE, NUCLEO-<u>L0</u>53R8, NUCLEO-<u>L1</u>52RE or NUCLEO-<u>L4</u>76RG

- Close the Sensors_DataLog GUI
- Configure the serial line monitor (speed, LF)
- Press the BLUE user button on STM32Nucleo



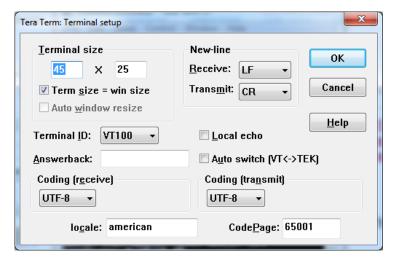

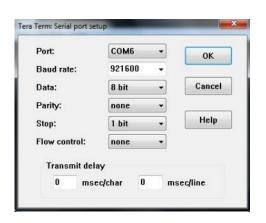

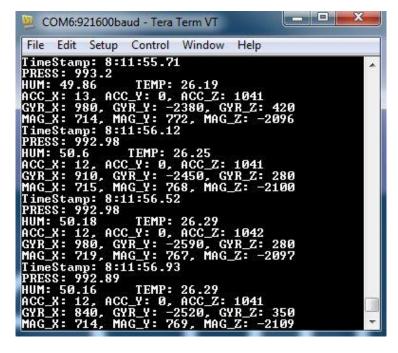



Documents & related resources

All documents are available in the DESIGN tab of the related products webpage

X-NUCLEO-IKS01A2:

- Gerber files, BOM, Schematics
- DB3009: Motion MEMS and environmental sensor expansion board for STM32 Nucleo Data brief
- UM2121: Getting started with motion MEMS and environmental sensor expansion board for STM32 Nucleo –
 User manual

X-CUBE-MEMS1:

- DB2442: Motion MEMS and environmental sensor software expansion for STM32Cube Data brief
- **UM1859:** Getting started with the X-CUBE-MEMS1 motion MEMS and environmental sensor software expansion for STM32Cube **User manual**
- Software Setup File



Quick Start Guide Contents

X-NUCLEO-IKS01A1: Motion MEMS and environmental sensor expansion board Hardware and Software overview

Setup & Demo Examples

Documents & Related Resources


STM32 Open Development Environment: Overview



STM32 Open Development Environment

Fast, affordable Prototyping and Development


• The STM32 Open Development Environment (ODE) consists of a set of stackable boards and a modular open SW environment designed around the STM32 microcontroller family.

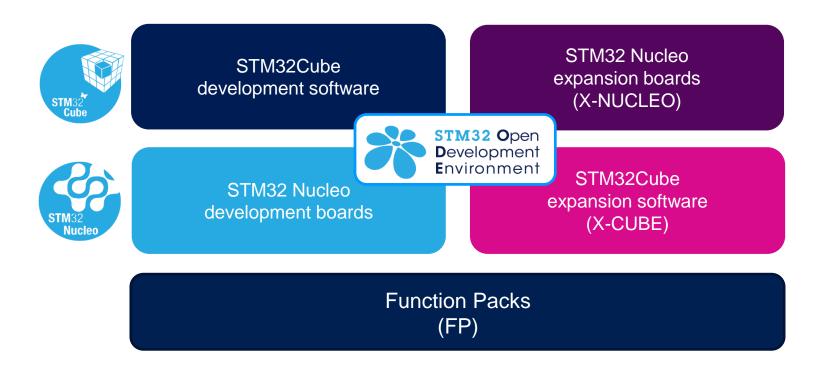




Development Boards (NUCLEO)

 A comprehensive range of affordable development boards for all the STM32 microcontroller series, with unlimited unified expansion capabilities and integrated debugger/programmer functionality.

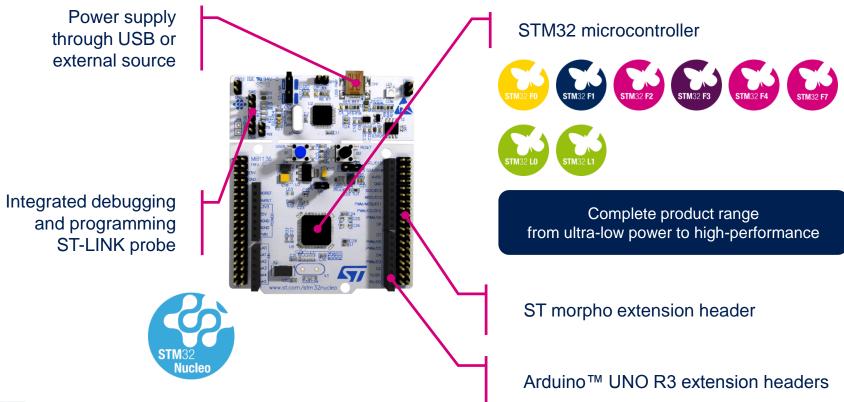

Expansion Boards (X-NUCLEO)

Boards with additional functionality that can be plugged directly on top of the STM32
 Nucleo development board directly or stacked on another expansion board.

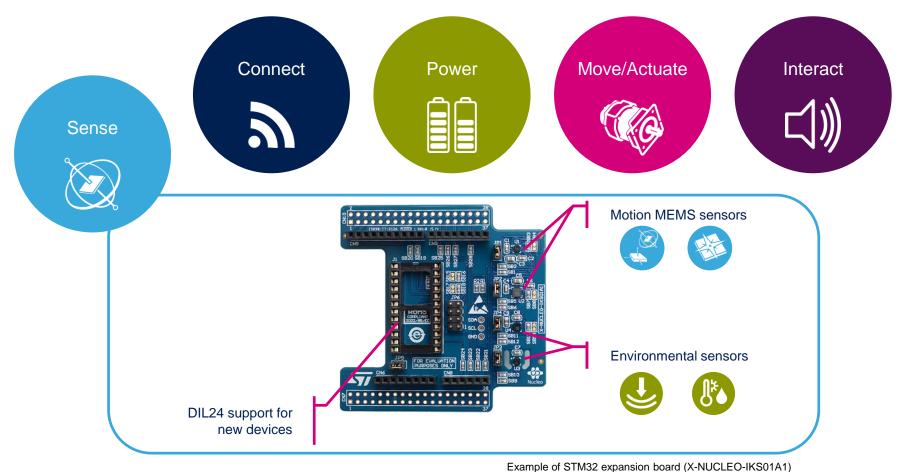




STM32 Open Development Environment

Software components

- STM32Cube software (CUBE) A set of free tools and embedded software bricks to enable fast and easy development on the STM32, including a Hardware Abstraction Layer and middleware bricks.
- STM32Cube expansion software
 (X-CUBE) Expansion software provided
 free for use with the STM32 Nucleo
 expansion board and fully compatible with
 the STM32Cube software framework. It
 provides abstracted access to expansion
 board functionality through high-level APIs
 and sample applications.

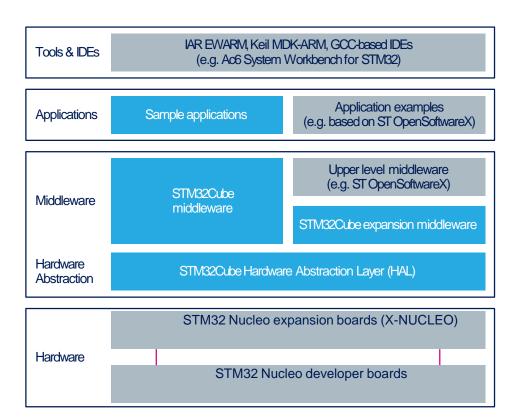

 Compatibility with multiple Development Environments - The STM32 Open Development Environment is compatible with a number of IDEs including IAR EWARM, Keil MDK, and GCC-based environments. Users can choose from three IDEs from leading vendors, which are free of charge and deployed in close cooperation with ST. These include Eclipse-based IDEs such as Ac6 System Workbench for STM32 and the MDK-ARM environment.



www.st.com/stm32cube

STM32 Open Development Environment

Building block approach

